

You can connect to wireless on the go using a T-Mobile hotspot, the information you need is on the back of the hotspot

Press the power button for 3 seconds to turn on the Hot Spot. You can now connect to the SSID starting with "CoolPad Surf" listed under Available Networks. You are now ready to use the T-Mobile Network connection.

Every CASD Chromebook comes equipped with a wireless network card. We will show you how to connect to an available wireless network

Before you try to connect, be sure you are within range of a wireless access point and your wireless card or hotspot is turned on and is enabled.

On the bottom right hand corner of your desktop, click the status bar, then click 'no network'. If your wireless is disabled, the next window will let you know.

To turn on wireless, click "turn wifi on", the system will search for wireless networks in range and will display ones found after a few seconds. Click the network name you wish to join. (CoolPad Surf for Hotspot). When a password box pops up, type in the password that is listed on the back of your Hot Spot. If you chose a different network, type in that network's password.

Once the password is entered, click 'connect' and the system will connect to your hotspot or router.

Sometimes if you change your password or try to connect to a router with a similar name, you'll have trouble establishing a connection.

To fix this, you can 'forget' previously remembered networks. Click the status bar and then click settings.

Click the drop-down arrow next to the wireless symbol and then choose preferred networks.

Bring your mouse over the network's name, it will become highlighted and an "X" will appear to its right. Click on the X to 'forget' the network and then click 'done'

Connecting to Wireless